

# CoolCare Nohmad Setup Guide

## What's included....

- Nohmad Clocking In Machine with power lead installed
- Velcro tabs and long screws for mounting



## How to Install...

All that you need to do is plug the power lead into a wall socket. You can mount it to a wall if required using two different methods


## Screwing...

To screw the Nohmad to the wall you need to mark the points where the screws come out of the back of the clocking in machine and drill a hole in each point. Then insert the wall plugs to the wall. Then remove the current screws in the Nohmad and replace them with the larger screws that are included and use them to screw the clocking in machine into the wall plugs.



## Velcro...

The best way to secure the Velcro tabs would be to cut the paper it is stuck to so you have two separate pieces for each tab and attach the male and female parts together then peel of the back of one side and secure it to the top and the other to the bottom of the back of the Clocking in Machine. Press down hard and keep pressure on it for a few seconds. Then remove the back of the tab and press it securely where you want to mount it and hold it in place for a few seconds.

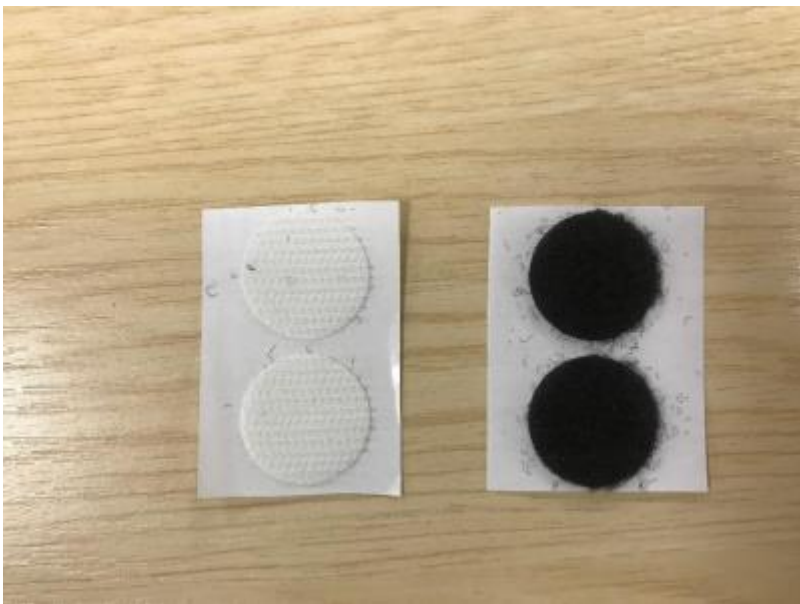

## Powering On...

Once you have secured the clocking in machine you just need to plug it in and once it is fully loaded up it will be connected. Always test by clocking in and checking the timesheets to make sure it is working correctly. The left LED light should be blinking on and off every couple of seconds, the right LED should be off.



To clock in and out simply press the FOB to the FOB reader until it beeps.

